


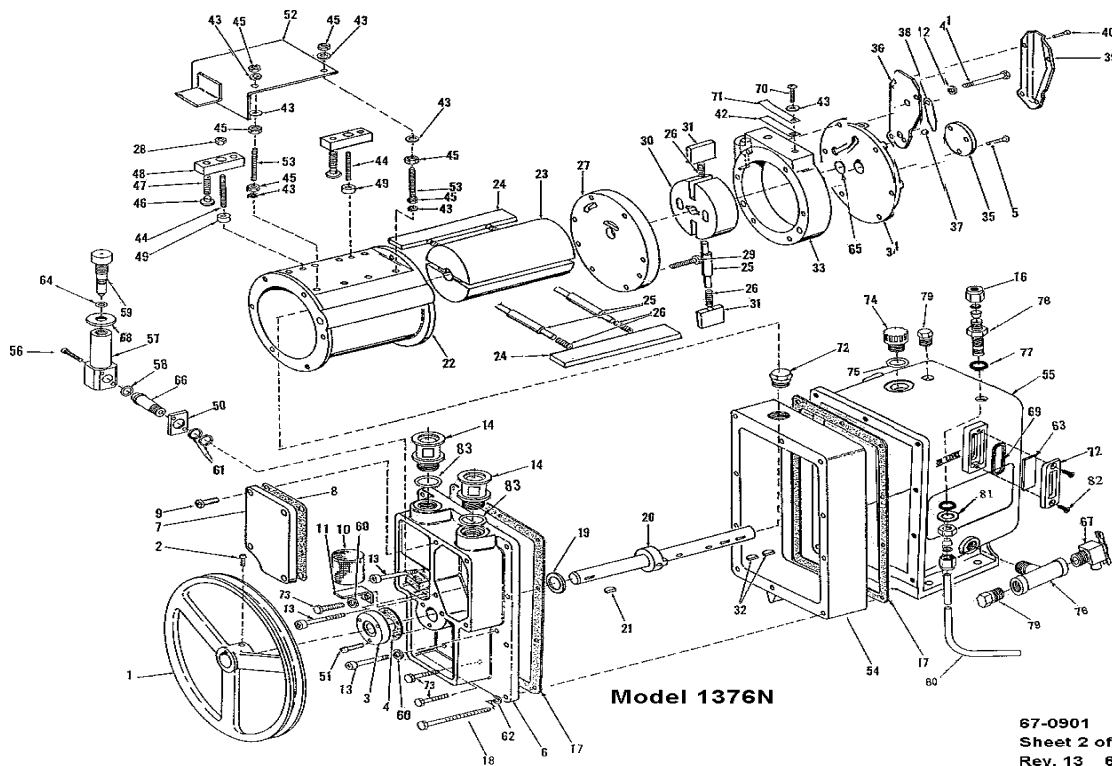

67-0901
Sheet 2 of 2
Rev. 13 6/04

PARTS LIST FOR MODEL 1376N

ITEM	QTY	PC. NO.	A*	B*	DESCRIPTION	ITEM	QTY	PC. NO.	A*	B*	DESCRIPTION
01	1	41-2074			Pulley incl. item 2	44	2	2-01-8128			Set Screw 1/4-20x1-3/4
02	1	2-01-9306			Socket Head Set Screw 5/16-18x3/8	45	6	2-31-0112			Hex Nut 1/4-20x3/16x7/16
03	1	1401D-01	1	1	Shaft Lip Seal includes items 4 & 5**	46	4	61-8314A	4	4	Block Valve
04	1	41-0643			Seal Gasket	47	4	41-2158	4	4	Valve Spring
05	3	2-00-2706			Fil. Head Screw 10-32x3/8	48	2	61-8313A			Valve Block
06	1	61-8684			Large End Plate	49	2	61-8315A	2	2	SS Valve Block Spacer
07	1	61-8670			Intake Cover	50	1	61-8102A			Flange For G.B. Valve
08	1	61-8278A	1	1	Intake Cover Gasket	51	3	2-00-6712			Socket Head Screw 10-32x3/4
09	4	2-01-6112			Socket Head Screw 1/4-20x3/4	52	1	61-8368B			Baffle Plate
10	1	41-1692	1	1	Intake Screen	53	2	41-2175			Set screw (Special)
11	1	61-8329A			Intake Screen Bracket	54	1	61-8686			Oil Case Spacer
12	6	41-2363			Washer	55	1	61-8319B			Oil Case Assy. incl. 63, 67, 76, 77, 78, 79, 80
13	3	2-01-6316			Socket Head Screw 5/16-18x1	56	2	61-8362			Socket Head Screw 8-32x1
14	2	61-8465A			Adapter NW25	57	1	61-8100A			Gas Ballast Valve Adapter
16	1	62-1141			Plug	58	1	61-8103	1	1	O-Ring, Fluoroelast. #905
17	2	61-8279B	2	2	Oil Case Gasket- Fluoroelast.	59	1	41-1736			Gas Ballast Valve incl. item 64
18	10	62-0015			Socket Head Screw 1/4-20x3-1/8	60	6	61-8456A			Washer Copper 5/16
19	1	41-0508	1	1	Thrust Washer	61	2	41-1056			Washer
20	1	41-1683			Shaft	62	10	2-63-0193			Split Lock Washer 1/4
21	1	41-0624	1	1	Pulley Key	63	2	61-2229A			Glass Window
22	1	41-1688			Large Ring	64	1	41-1742	1	1	O-Ring, Fluoroelast. #011
23	1	41-1682			Large Rotor	65	3	41-1766			Thrust Disk
24	2	41-1684	2		Large Vane	66	1	61-8101A			Gas Ballast Connector
25	3	41-0696	3	3	Spring Holder	67	1	41-1734			Drain Valve
26	6	61-8559A	6	6	SS Vane Spring	68	1	41-2757			Lock Nut
27	1	61-8250C			Center Plate	69	2	66-0304	2	2	O-Ring, Fluoroelast. #127
28	2	2-36-9900			Lock Nut 1/4-20	70	1	2-01-5106			Round Head Screw 1/4-20x3/8
29	2	2-01-6320			Socket Head Screw 5/16-18x1-1/4	71	1	61-8311A	1	1	SS Upper Exhaust Valve
30	1	41-1518			Exhaust Rotor	72	2	61-2370			Cover, Window
31	2	41-1487	2		Small Vane	73	3	2-01-0316			Hex Head Screw 5/16-18x1
32	2	41-0613	2	2	Woodruff Key	74	1	61-2372			Filler Plug
33	1	61-8108D			Exhaust Ring	75	1	61-2159A	1	1	O-Ring, Fluoroelast. #115
34	1	41-2045			Small End Plate	76	1	61-8266			Tee 1/4 NTP
35	1	41-0672			End Cap	77	2	62-0118	2	2	O-Ring, Fluoroelast. #013
36	1	61-8310A			Pressure Release Duct Part 2	78	1	61-8382			Union
37	1	4-40-1200	1	1	Steel Ball	79	2	61-8384			Plug 1/4 NTP
38	1	61-8262A	1	1	SS Pressure Release Valve	80	1	61-8321B			Bubbler Tube
39	1	61-8309B			Pressure Release Tube Part 1	81	1	62-0121			SS Washer
40	3	62-0259			Bd. Head Sheet Metal Screw #6x1/4	82	4	61-2232			Flat Hd Screw 8-32x1/2
41	6	2-01-0356			Hex Head Screw 5/16-18x3-1/2	83	2	61-9284A	2	2	O-Ring, Fluoroelast. #214
42	1	61-8312A	1	1	SS Lower Exhaust Valve			1-99-5282	1	1	Sealant 6cc
43	3	2-61-0000			Steel Washer 1/4 size						

A*: MAJOR REPAIR KIT CAT # 1376K-10

B*: MINOR REPAIR KIT CAT # 1376K-09

** 1401D is mechanical seal kit includes mechanical seal, gasket and 3 screws

67-0901
Sheet 1 of 2
Rev. 13 6/04